


ROKOKO

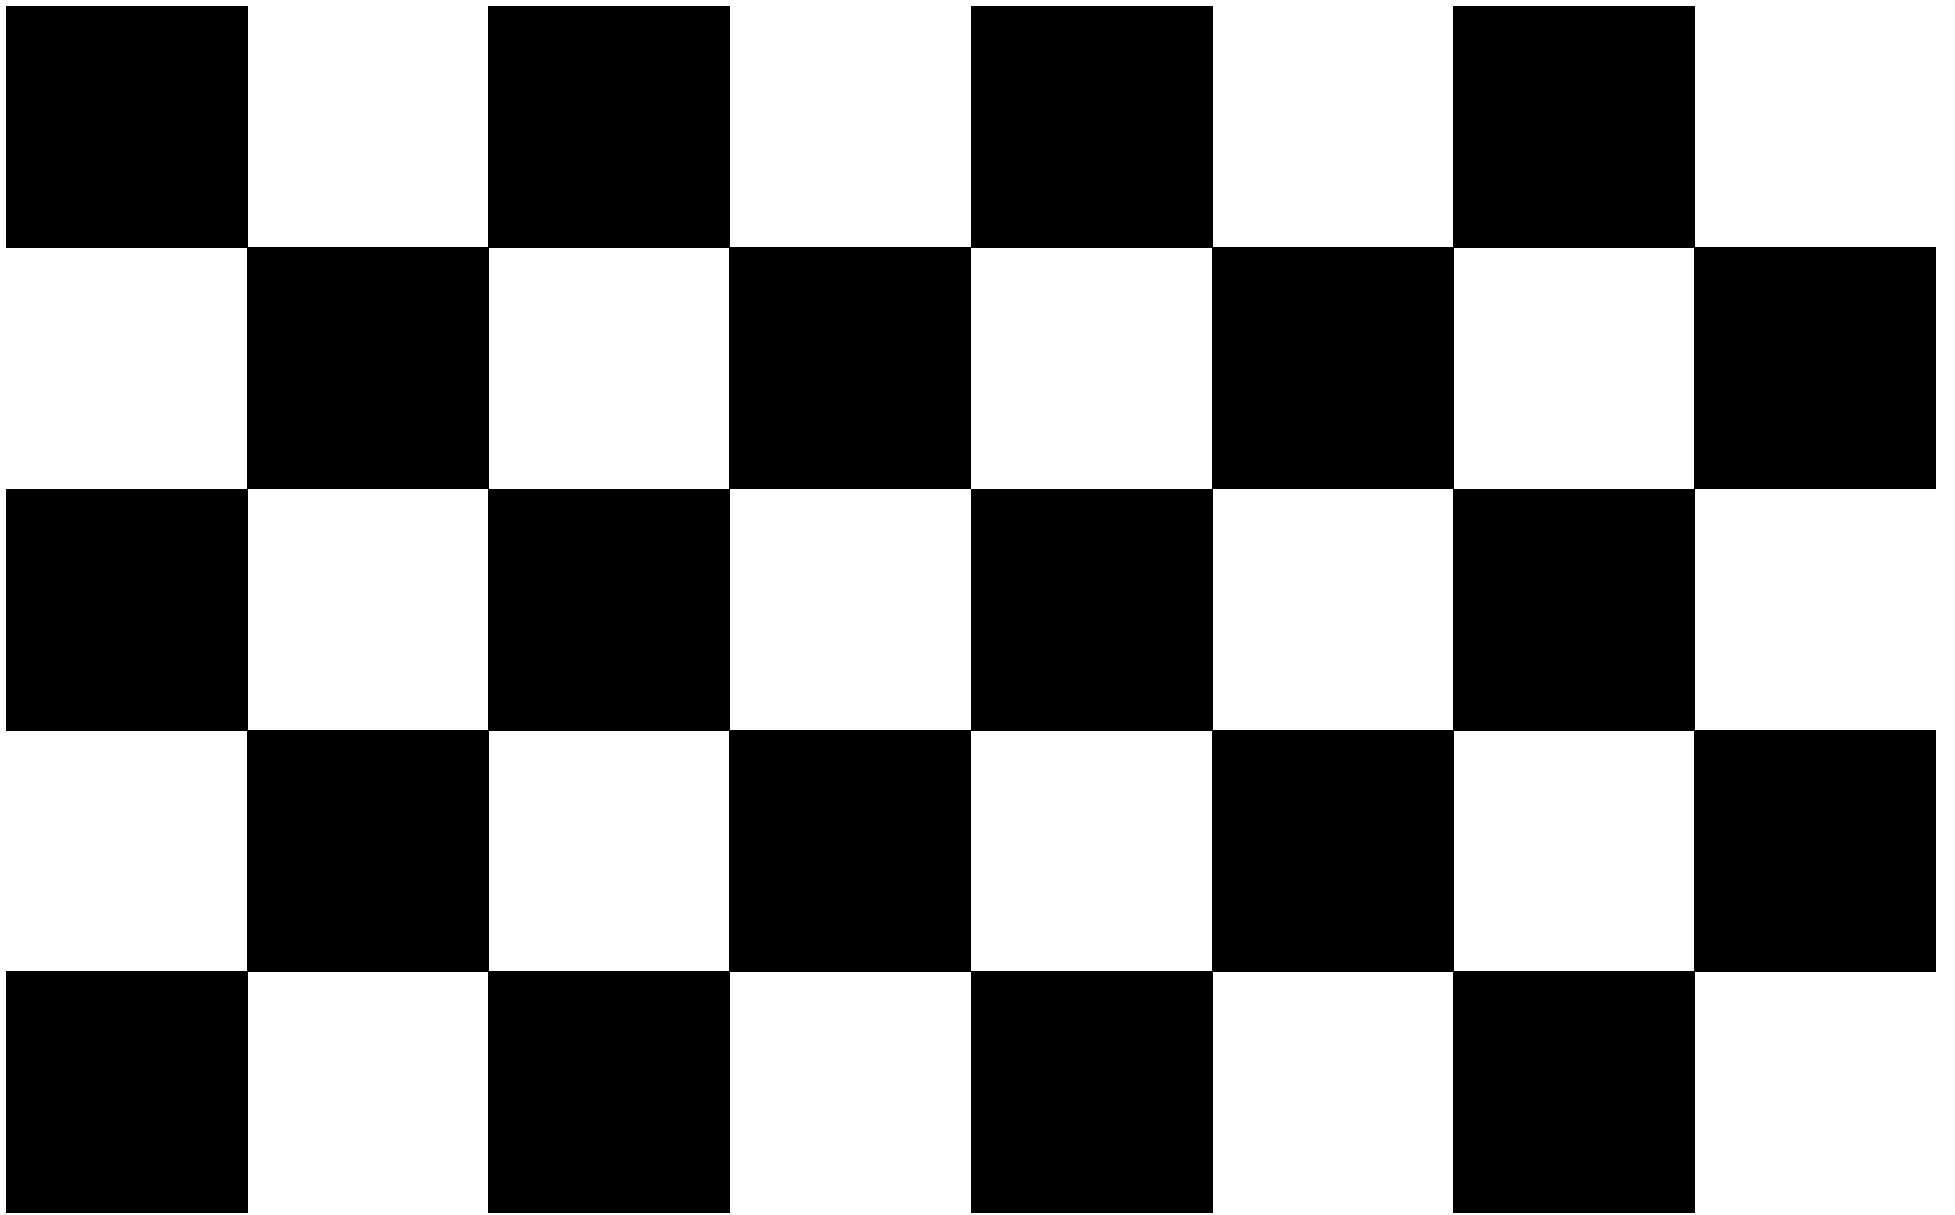


Checkerboard

A4 - 210 × 297 mm / 8.3 × 11.7 in


ROKOKO

How to use the Calibration Marker?

- 1 Place it on the floor at your starting position.
- 2 Make sure it is aligned with any lines or patterns on the floor or walls, and that it is visible to both cameras.
- 3 Ensure it is not moved until the calibration has been successfully completed.

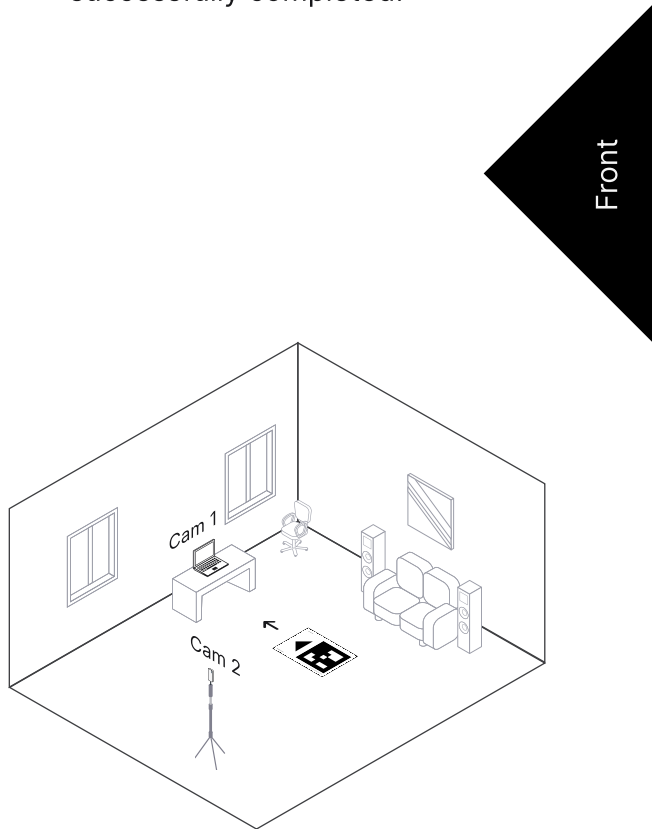

Front

 

Calibration marker

A4 - 210 × 297 mm / 8.3 × 11.7 in