


ROKOKO


Headcam

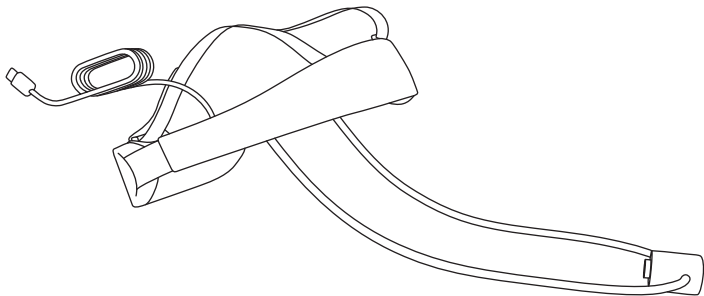


01

What's in the box


Headcam consisting of a front and back part (the back part has a velcro strap attached to it)

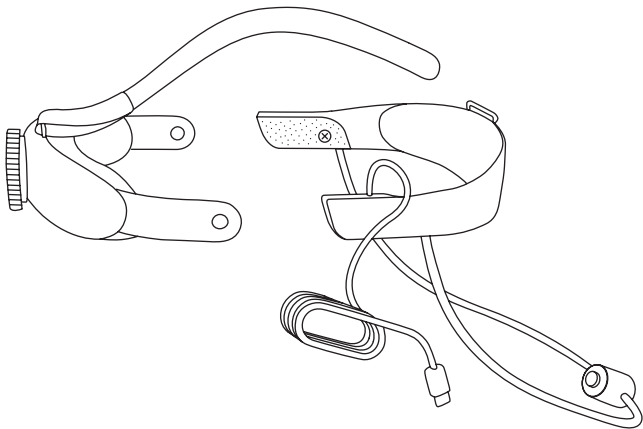

Foam padding in three different sizes

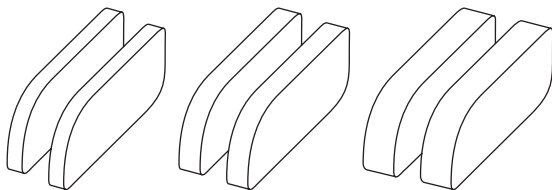

2 loose velcro pads to connect to the Smartsuit Pro II head sensor

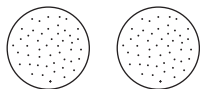

Want to know more?

Head over to rokoko.co/headcam




02


How to set up

1. Assemble your Headcam

a) Pull the top strap that goes from the back part of the Headcam through the loop on the front part and secure it in place with the velcro.

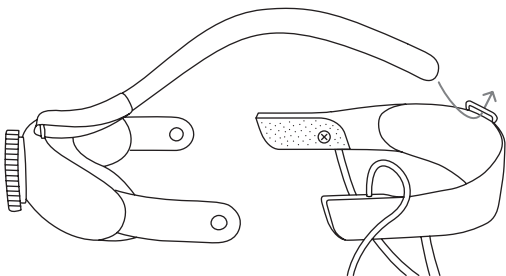

b) Slide and click the back part into the front part, ensuring that the top velcro strap is oriented on the top of the product as pictured.

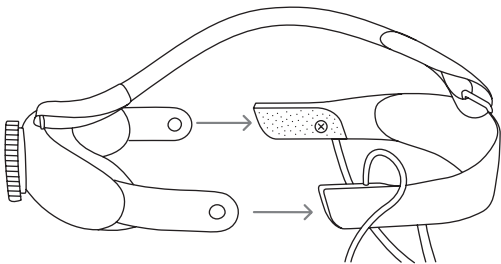


Disassemble



If you need to take your Headcam apart, follow the guide on rokoko.co/headcam

2. Adjust the Headcam to fit you


a) Find the most comfortable size of the side padding for your head size and shape and attach it to the insides of the Headcam.

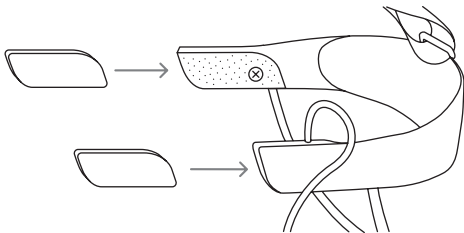

b) Place the Headcam on your head.

c) Adjust the top velcro strap.

d) Adjust the tightening mechanism on the back.

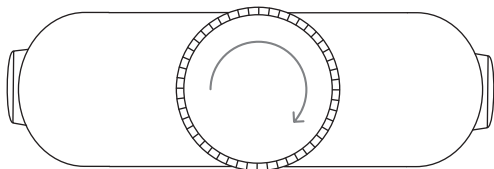

Note of caution




Avoid using excessive force when adjusting the tightening mechanism.


3. Check camera

a) Make sure the Headcam sits on your head at an angle that allows the camera to capture your entire face.

For optimal performance, the camera should be level with your nose tip pointing horizontally at your face (it should not point up your nose).

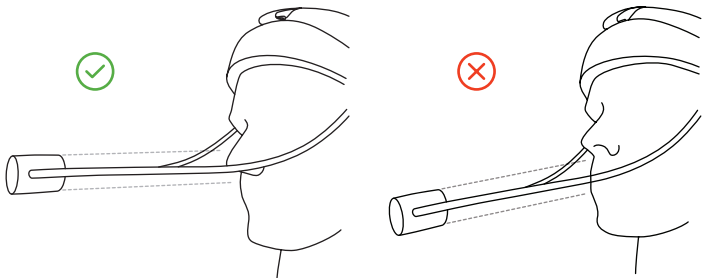


b) Make sure your face is in focus. If not, carefully adjust the focus by rotating the camera lens.

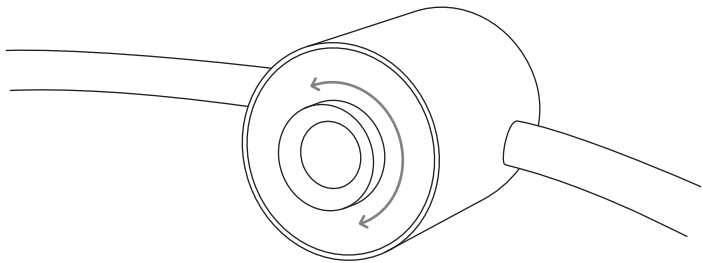

4. Capture

a) To capture, plug the USB cable into a device that supports external USB cameras, such as Android phones or computers, and use the Headcam as a video source in any application that accepts external camera input.


b) The Headcam features dimmable LEDs for fill light. Three different light intensities can be toggled by tapping on the rear side of the camera. If capturing in an environment with poor lighting, brighter LEDs are recommended.

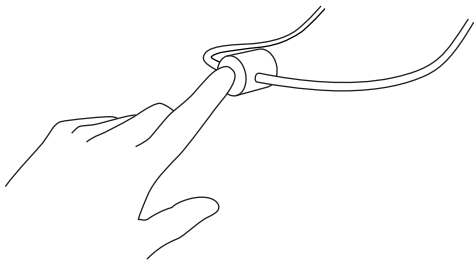



03

How to use the Headcam with Smartsuit Pro II

a) The included loose velcro pad is to be stuck on the side of the of the Headcam.

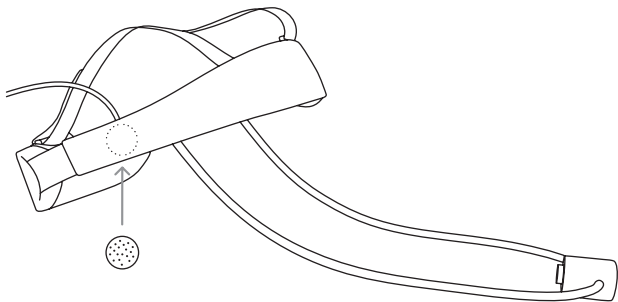

b) Attach the head sensor from your Smartsuit Pro II to the velcro pad on your Headcam.

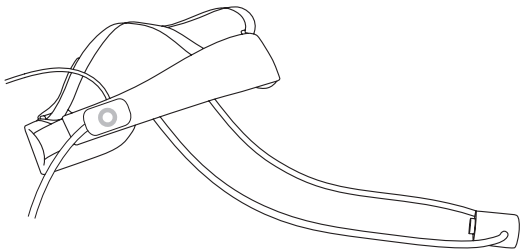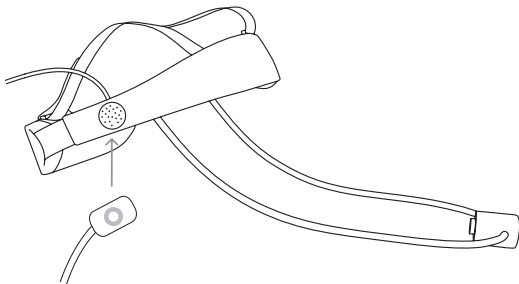

04

Product specifications

Physical

Dimensions: 160 × 190 × 450 mm (H x W x L)

Weight: 240 g

Camera

Sensor: RGB

Max resolution: 1600 × 1200

Frame rate: 60 FPS

Shutter type: Electronic global shutter

Other

Fill light: Dimmable LEDs

Microphone: Yes

Connection type: USB 2.0 (type C connector)

Supply voltage: DC 5V

Need to reach us?

Write to support@rokoko.com
and connect with our
Customer Support Team.

Want to know more?

You can watch our product onboarding
series on our YouTube channel.



Thank you!

We are grateful to have you as part of our community.

Follow us on our social media channels and tag your work #MadeWithRokoko



Headcam Quick Start Guide v3

The latest version of this Quick Start Guide is available for download at: support.rokoko.com



rokoko.com

support@rokoko.com