


ROKOKO


# Smartgloves

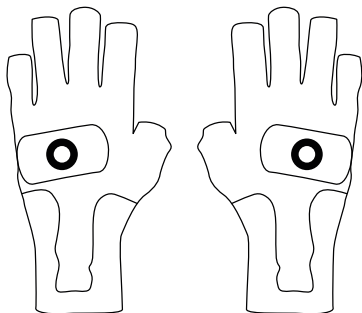

# 01

## What's in the box


A pair of  
Smartgloves

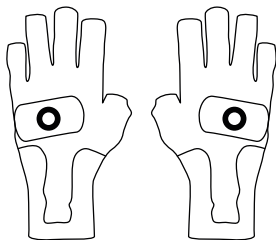


A case to store  
your gloves



Two short USB C  
to A cables

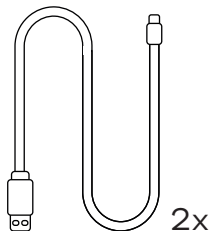

Two long USB C  
to A cables

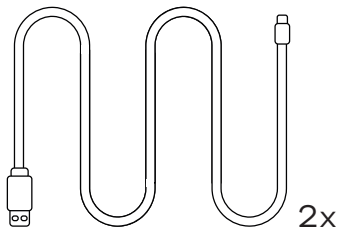

**Not included:**




External powerbank to power up your gear  
(USB-A able to output 5V/3A, 10000 mAh+)

## 02

# How to connect your gloves

1. Download and install Rokoko Studio by going to [rokoko.co/studio](https://rokoko.co/studio)
2. Use the USB C to A cable to connect the glove's hub to the computer: the C end connects to the hub, and the A end connects to the computer.

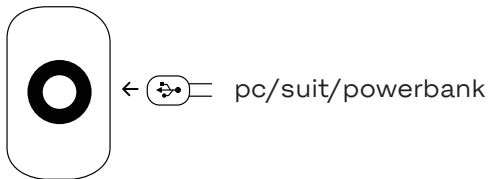

3. Go to Rokoko Studio and update the firmware from the device manager in the top right corner of the application.

4. Go to WiFi settings for the relevant device in the device manager, fill in the details for your WiFi and connect it to your WiFi network.

If you get stuck, use the QR code at the bottom of this page or go to [rokoko.co/wifi](https://rokoko.co/wifi)

5. Once you see the message “WiFi device connected”; disconnect the A end of the cable connecting to the computer and use it to connect the glove to the powerbank.
6. Repeat for the second glove.

**Want to know more?**

Head over to [rokoko.co/gloves](https://rokoko.co/gloves)



# 03

## Onwards to Motion Capture

### 1. Create a scene

Setup your motion capture scene with the relevant Actors and pair your Rokoko gear to them.

### 2. Calibrate

Once paired, be sure to calibrate all actors. It is good practice to do so once in a while in-between recordings as well.

### 3. Record or livestream

When everything is set up and calibrated, start recording and see your motion capture in real-time. You can also instead choose to just

livestream the data to another application like Blender, Unity, Unreal or Maya.

#### 4. **Clean**

Use our built-in filters and editing tools to clean up your mocap recordings and have it looking just right.

#### 5. **Export**

When you're done with your recordings, you can batch export using a range of export settings.

**Want to know more?**

Head over to [rokoko.co/gloves](https://rokoko.co/gloves)




# 04


## How to connect the gloves to Smartsuit Pro II

Smartgloves can be connected straight to your Smartsuit Pro 2. By doing so, your entire setup consisting of Smartsuit Pro 2 and Smartgloves are powered by a single powerbank. The powerbank must be able to deliver 5V/3A from one output with a suggested capacity of at least 10000 mAh.


1. Put on your Smartsuit Pro II (Glove-ready).

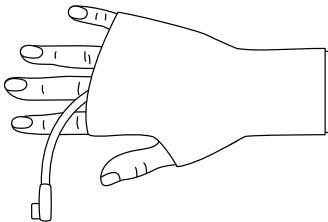

2. Put on your Smartgloves.

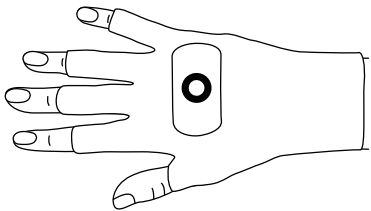

3. Connect the cable from the suit to the hub on the glove.

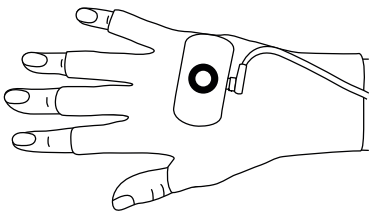

4. Repeat for the second glove.

Need to reach us?

Write to [support@rokoko.com](mailto:support@rokoko.com)  
and connect with our  
Customer Support Team.

Want to know more?

You can watch our product onboarding  
series on our YouTube channel.



Thank you!

We are grateful to have you as part of our community.

Follow us on our social media channels and tag your work  
#MadeWithRokoko



● ROKOKO

[rokoko.com](http://rokoko.com)

[support@rokoko.com](mailto:support@rokoko.com)